

Part Number: 809791

STABILUS POWERISE

Installation Instruction

Note: Only authorized personnel should perform the installation. Always refer to the manufacturer's guidelines for specific instructions and safety precautions.

Step 1: Prepare the grommet

- Apply a drop of dish soap to facilitate plug movement
- Slide the chassis plug onto the 18th rib. Note: Do not count the first two ribs next to the drive
- Adjust the grommet's length by holding the grommet, not the drive

Step 2: Dismantle the car's panel

- Remove the panel to access the connector
- Disconnect the connector from the vehicle, noting the connectors' appereance may differ

Step 3:Remove the drives

• Support the tailgate/trunk lid while removing the drives one at a time



chassis

arommet

• Release the clip at the end fittings

Step 4:Install Stabilus Replacement Drives

- Install the Stabilus replacement drives
- Link the cables from the Stabilus drive to the counterpart connector
- Make sure you put the left hand drive on the left side and the right hand one on the right side



Stabilus GmbH

Wallersheimer Weg 100 56070 Koblenz Germany T +49 261 - 8900-0 info@stabilus.com www.stabilus.com

VW ID.4

Generation: 2020 From 8/22

OE-Numbers:

11A 827 851 B 11A 827 851 C



Part Number: 809791

VWID.4

From 8/22

Generation: 2020

OE-Numbers:

11A 827 851 B

11A 827 851 C

Installation Instruction

STABILUS

Note: Only authorized personnel should perform the installation. Always refer to the manufacturer's guidelines for specific instructions and safety precautions.

Step 5:Insert the Grommet

- Ensure proper insertion of the grommet into the vehicle
- Use a drop of dish soap to ease installation
- Confirm the grommet length is correct
- Prevent contact of the grommet to the bodywork (excep for cable routing) or placing the grommet under tension during this process



• If necessary, readjust

Step 6:Set up control unit

After reassembling the panel:

- Close tailgate manually, until lock is engaged
- Open and close the hatch automatically (learning
 run)



Caution: Be mindful of the Push-To-Run function in some electric tailgate systems; moving the tailgate too quickly during setup can cause complications.

Step 7:Set Desired Hatch Position

- Manually open the hatch to the desired position
- Program the drive accordingly by pressing and holding the closing button on the hatch until a signal is received.
- Make sure the tailgate only opens to the programmed position now, by closing and opening the tailgate automatically again



Stabilus GmbH

Wallersheimer Weg 100 56070 Koblenz Germany T +49 261 - 8900-0 info@stabilus.com www.stabilus.com